



# 中国重汽 SINOTRUK SPARE PART CENTER

## ONE-STOP VEHICLE SALES & AFTER-SALES SUPPORT





# SINOTRUK SPARE PART CENTER



001  
后制动蹄总成  
Brake Shoe Assembly



002  
轮边滚针轴承  
Wheel Hub Needle Roller



003  
制动蹄支承销  
Brake Shoe Pin



004  
拉杆球头 大头  
Tie Rod End



005  
回位弹簧  
Brake Return Spring



006  
后制动整臂总成(右)  
Brake Slack Adjuster(R)



007  
前轮螺栓  
Hub Bolt



008  
前调整臂  
Brake Slack Adjuster



009  
制动块总成  
Brake pad



010  
从动圆柱齿轮 27齿  
Differential Driven Gear



011  
半轴齿轮(轮间)  
Side Gear



012  
锥齿轮副 后桥  
Pinion&Ring Gear



013  
转向节支架总成(右)  
Knuckle Bracket(R)



014  
前制动蹄总成  
Brake Shoe Assembly



015  
制动蹄回位簧  
Brake shoe return spring



016  
后制动鼓(低配)  
Brake Drum(low)



017  
前制动鼓(高配)  
Brake Drum(high)



018  
过桥箱盖  
Pass Axle Box Cover



019  
强化型轴间差速器总成  
Differential Assembly



020  
后桥轮间差速器壳  
Differential housing



021  
后桥主减速器总成  
Rear axle driver



022  
半轴(左)  
Drive Shaft(L)



023  
圆锥滚子轴承  
Bearing-Differential



024  
轮边太阳轮  
Sun Gear-Wheel Hub



# SINOTRUK SPARE PART CENTER



025

差速器摆杆  
Differential lock rod



026

主减速器壳 (中桥)  
Main reducer shell



027

轴承座  
Bearing seat



028

制动凸轮轴支架  
Support-Brake Camshaft



029

后凸轮轴  
Rear camshaft



030

后轮毂  
Wheel Hub



031

HOWO/制动摩擦片  
Brake Lining



032

STR/制动摩擦片  
Brake Lining



033

主销修理包  
King Pin Kit




034

前悬减振器  
Front suspension damper



035

后轮毂螺栓  
Rear wheel hub bolt

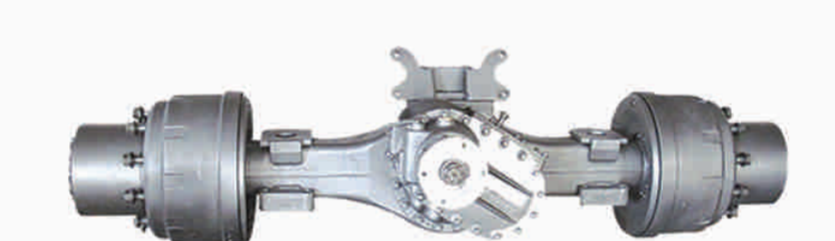

036

中间支承总成  
Drive Shaft Hanger



037

传动轴连接盘Φ180盘齿  
Flange yoke



038

前骑马螺丝  
U-Bolt



039

后骑马螺丝  
U-Bolt



040

橡胶支座总成  
Rubber Bearerhole 2 or 3 hole



041

传动轴  
Transmission shaft



042

万向节  
Universal Joint



043

浇铸式推力杆总成  
Torque Rod Assembly



044

平衡轴总成  
Trunnion Assembly



045

推力杆球头  
Torque Rod Bushing



046

橡胶支座总成  
Rubber Bearerhole 2 or 3 hole



047

V型推力杆总成  
V-Thrust Rod Kit



048

后悬减振器总成  
Rear suspension shock  
absorber assembly



049

平衡轴推力轴承  
Bearing-Trunnion



050

钢板限位块  
Stop Block



051

前左/右钢板弹簧总成  
Leaf Spring Assembly



# SINOTRUK SPARE PART CENTER



052  
变速箱前壳  
Gearbox front case



053  
变速箱后壳  
Rear case of gearbox



054  
变速箱后壳 (带取力器)  
Rear case of gearbox



055  
副箱总成  
Auxiliary box assy



056  
高档锥毂总成  
High-grade cone hub assy



057  
低档锥毂总成  
Low-grade cone hub assy



058  
范围档同步滑套  
Range gear synchronous sliding sleeve



059  
范围档同步齿座  
Range gear synchronous tooth seat



060  
范围档同步环  
Range gear synchronization ring




061  
重汽副箱总成  
SINOTRUK auxiliary box assy



062  
行星机构总成  
Planetary mechanism assy



063  
双H阀总成  
Double H Valve assy

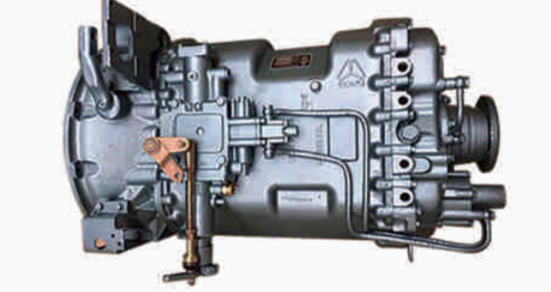

064  
取力器  
Power take-off



065  
范围档拨叉  
Range Gear Fork Drawing  
Range fork lift fork



066  
范围档气缸  
Range gear cylinder



067  
输出轴后端盖 (新式)  
Output shaft rear end cover (new)



068  
输入轴端盖 (推式/拉式)  
Input shaft end cover  
(push/pull)



069  
Oil pump assy  
油泵总成



070  
行星轮  
Planet gear



071  
太阳轮  
Sun wheel



072  
输入轴  
Input Shaft



073  
主轴 (带球头总成)  
Spindle (Ball Head assy)



074  
小盖总成 (双杆)  
Small Cover assy (Double Rod)



075  
副轴总成 (左、右)  
Auxiliary Shaft assy (L/R)



076  
分离轴承430拉式 优质  
Clutch release bearing



077  
离合器助力缸  
Booster Cylinder



078  
支撑杆总成  
Support rod assembly



079  
拨叉轴总成  
Fork shaft assembly



# SINOTRUK SPARE PART CENTER



080

2位3通电磁阀  
Solenoid valve



081

鼓风机总成  
Blower assembly



082

接触环  
Contact Ring



083

雨刷间歇继电器  
Relay-Wiper



084

压力开关  
Reverse Gear Switch



085

压力开关  
Pneumatic Switch



086

电源总开关  
Battery Main Switch



087

喇叭回位环  
Return Ring



088

组合开关  
Combination Switch



089

钥匙开关  
Ignition Switch



090

取力器开关  
Switch-Pto



091

轴间开关  
Switch-Shaft



092

危急报警开关  
Switch-Emergency



093

制动总阀  
Brake main valve



094

钥匙起动开关总成  
Ignition Switch



095

手制动阀  
Hand brake valve



096

刹车总泵  
Brake master cylinder



097

继动阀  
Relay valve



098

挂车阀  
Trailer valves



099

重汽三桥继动阀  
realy valve



100

四回路保护阀  
4-circuit protection valve



101

变速箱气控锁止阀总成  
air lock valve



102

二位七通阀  
auxi-valve




103

排气蝶阀总成  
exhaust brake valve assembly



104

举升阀  
Lifting valve

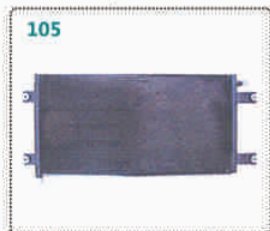

105

重汽豪沃冷凝器  
Howard Condenser of Heavy Truck



106

空气干燥器  
Air dryer tank



107

离合器总泵及储油罐总成  
Clutch Master Pump and Tank Assembly



108

压缩机总成(螺纹式接口)  
Air Conditioner Compressor



109

制动气室  
Brake chamber



# SINOTRUK SPARE PART CENTER

110



豪沃前照灯左  
HW headlamp left

111



前组合灯(左)  
Front Combination Lamp (left)

112



左组合后灯  
Left combined backlight

113



燃油箱总成  
Fuel Tank

114



HOWO前面罩  
HW Front Covers

115



HOWO高位保险杠总成  
HW High Bumper Assembly

116



转向盘 (HOWO)  
Steering Wheel

117



右前翼子板前段总成  
Front segment assembly  
of right front fender

118



左门电动玻璃升降器总成  
Left Door Electric Glass Lift Assembly



119



HOWO车右后视镜 (右置车)  
HOWO right rearview mirror  
(right mounted vehicle)

120



消声器总成 (内排)  
Silencer assembly (inner row)

121



右前翼子板后段  
Rear section of right front fender

122



双音气喇叭 (VOSS)  
Air Horn

123



挡风玻璃  
windshield

124



左下踏板  
Left lower pedal

125



翼子板左侧转向灯  
Left turn signal on the fender

126



车门路面补盲镜  
Blind mirror for car  
door pavement repair

127



前示廓灯总成  
Front clearance lamp assembly

128



雨刷片  
windshield wiper blade

129



车门锁总成  
Door lock assembly



# SINOTRUK SPARE PART CENTER

130



重汽原厂曲轴  
68# crankshaft

131



重汽2气门EGR  
EGR Cylinder

132



各种缸盖  
Cylinder head

133



重汽四配套  
Four matching

134



各种轴瓦/止推片  
Bearing bush  
thrust plate

135



全车垫  
All car cushion

136



各种齿圈  
Ring gear

137



连杆螺丝  
Connecting rod screw

138




各种型号连杆  
Connecting rod

139



增压器  
(0020/0021)  
Supercharger

140

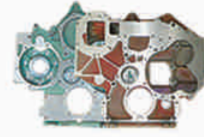

正时齿轮室  
Timing gear chamber

141




油底壳  
Oil pan

142



欧I 欧II 集滤器  
Euro I Euro II Strainer

## SINOTRUK ENGINE ASSY

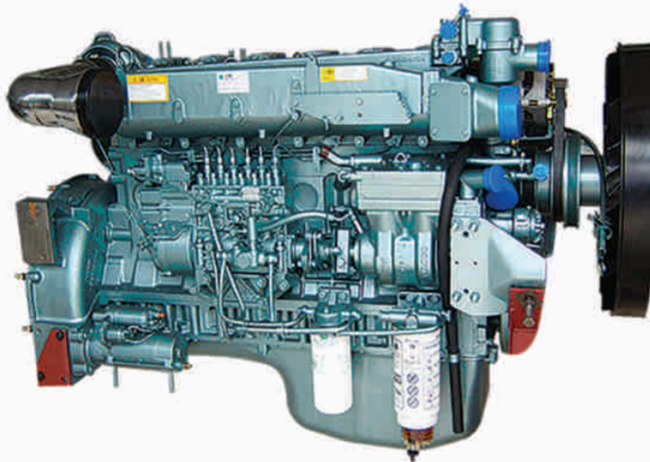

143



油气分离器  
Oil-gas separator

144



后排气管  
Rear exhaust pipe

145



豪沃节温气芯  
71°C/80°C  
Thermostat core

146



飞轮  
Fly wheel

147



气缸垫  
Cylinder gasket

148



飞轮壳  
Flywheel housing

149



机油泵  
Oil pump

150



共轨组件  
Common rail  
component

151



机油冷却器芯/盖  
Oil cooler core/cover

152



燃气混合器  
(0404)  
Gas mixture

153



各种托架  
Various brackets

154



各种小件  
Various small pieces

155



自动涨紧轮/各种皮带  
Automatic tensioner / belt

156



节温器  
Thermostat

157



凸轮轴、气门  
Camshaft valve

158



凸轮轴盖及支架  
Camshaft cover  
and bracket

159



各种齿轮  
Various gears



FAMILY SERVICE  
FEELS KIND

親人服務 倍感親切



**MOROWALI:**



**PT. ABADI JAYA MACHINERY**

Tel: 0812 553 5678

Mail: 153659548@qq.com

Add: JL. Tran Sulawesi bahomotefe Kec. Bungku Timur,  
Kabupaten Morowali, Sulawesi Tengah 94973



WhatsApp contact

**JAKARTA:**



**PT. MENANG GANDA SENTOSA**

Tel: 0822 6688 5678

Mail: pt.menanggandasentosa@gmail.com

Add: Jl. Saluran Irigasi Cisadane Timur Duta Indah Starhub  
S 01 RT 04/RW 08 Kecamatan Benda Kelurahan  
Belerung, Kota Tangerang, Banten, 15123



WhatsApp contact